

Mounting instructions for seesaw „sali 4“

Item No. 51 2515 402


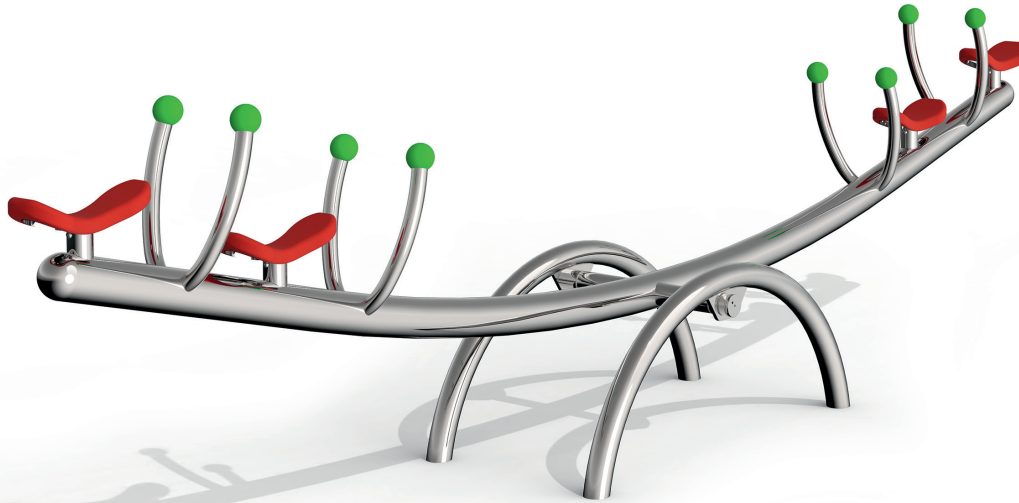


Diagram 1: Overall view of play equipment

Mounting instructions for seesaw „sali 4“

Item No. 51 2515 402

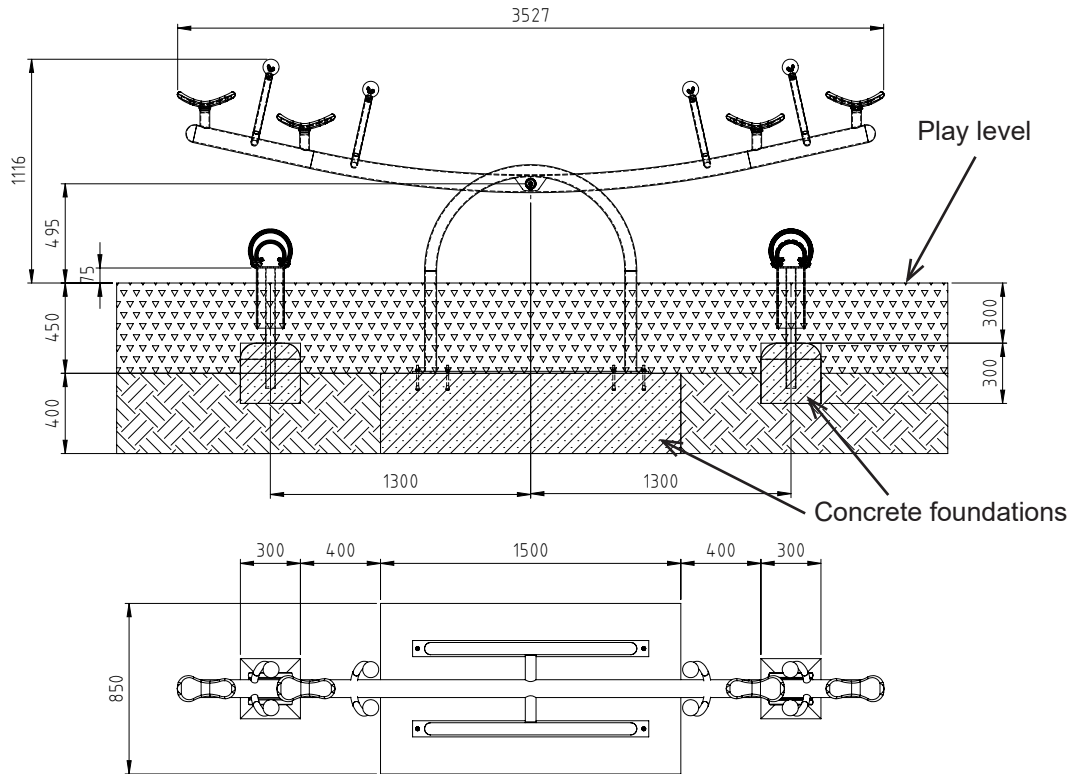

Legende

 


-  stoßdämpfender Boden
shock-absorbing floor
-  Beton
concrete
-  gewachsenes Erdreich
natural ground

Diagram 2: Foundation plan

1. Select the location of the play equipment taking into account the required minimum space (see diagram 3).
2. The impact area of a playground equipment with an enforced movement is not allowed to overlap the impact area of other equipment.
According to DIN EN 1176-1, 4.2.8.5.2 shock-absorbing floors must be made on the entire impact area of every equipment that cause forced movement.
3. Carry out excavation work for the foundation as shown in diagram 2. After excavation compress the foundation floor.
Note: The seesaw is installed at play level. Pay attention to items marked „play level“ at play equipment!
4. Set up the concrete foundations according to diagram 2 with central, horizontal reinforcement. The tube of the seesaw softeners have to be set in concrete.

Reinforcement plan: Concrete foundation with reinforcement

Main foundation: BSt 500S

Stirrups Ø 8 mm lengthwise and cross

Concrete cover $h' = 3$ cm

Concrete quality class C 20/25

5. After a setting period of 10 – 14 days, depending on weather conditions and foundation size, fill up and compress the holes between the foundation and the foundation hole with excavation.

Mounting instructions for seesaw „sali 4“

Item No. 51 2515 402

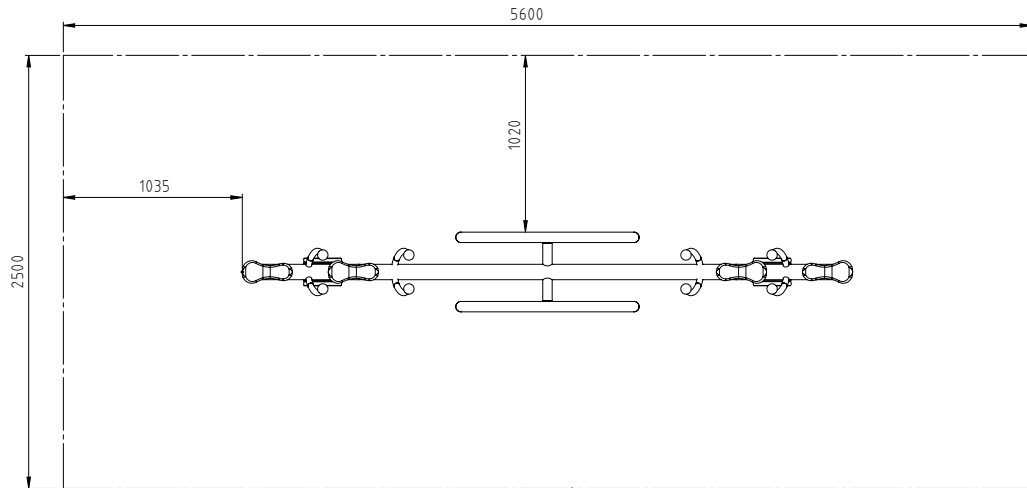


Diagram 3: Top view

Area of the
minimum space

6. Clean the foundation surface and place the play equipment on it. Screw the play equipment onto the foundation using the included heavy-duty dowels.

7. Cover the entire impact area with fall protection according to the required drop height in accordance with EN 1176-1.

Critical drop height: 1450 mm

Recommended surface material: sand, wood chip, gravel, synth. impact protection.

With a smaller installation depth (special edition) we recommend synthetic fall protection. In this case, make sure that protruding parts (e.g. screws, gusset plates) are covered with appropriate fall protection.

8. Please install at the point of impact suitable impact-absorbing elements. A suitable impact-absorbing element must achieve the following requirements: the movement must be stopped gradually, so that there is no sudden stop or a sudden inversion of the movement.

9. Do not allow children to use the equipment before the installation has been finished.

Seesaw softeners must be ordered separately. We recommend the seesaw softener n° 451611131 available at stilum.

Stilum seesaw softener n° 45161013x is only to be installed on a solid underground.

Mounting instructions for seesaw „sali 4“

Item No. 51 2515 402



Attention: If the play equipment has been incompletely installed or partly dismantled when carrying out maintenance and repair work, this may lead to particular risks of injury for the user. For this reason, make clearly visible that the equipment shall not be used in such cases.

NOTE: Play equipment, which contain components made of stainless steel should not come with „normal“ steel parts in contact. Those steel parts may rub off and leave small steel particles in combination with moisture brown rust stains. If such corrosion occur on stainless steel parts, they are fine with an abrasive (240 grit) to remove.

Please take care when transporting and setting up the fact that the components are made of stainless steel with no „normal“ steel parts in contact.

In order to preserve a good visual appearance of your stilum playground equipment over a long period one should take care of maintenance of the stainless surface even despite of their corrosion resistance.

Especially areas, which can not be reached by rainfall should be frequently cleaned from dirt and deposits due to air pollution and dirt caused by the atmosphere. Light soiling can easily be removed by using a high pressure cleaner. For persistent deposits use a clean cloth moistened with a special liquid cleaner (e.g. on phosphoric acid) and rinse off with clear water after a short application time. During cleaning with mild abrasive components, only wipe over stainless steel surface in polishing direction.

For heavily soiled surfaces, polishes can be used (e.g. for cleaning chrome on cars) or for greasy and oily dirt alcoholic cleaning agents and solvents (e.g. ethyl alcohol, isopropyl alcohol or acetone).

However, it should be noted that the dissolved soiling is not spread over the surface again.

Do not use any chlorid or hydrochloric containing cleaning products nor scouring powder, bleaching - or silver polish cleaner. Cleaning intervals depend on type and degree of soiling as well as on demands made on optical characteristics. Therefore cleaning is advisable at intervals of six to twelve months – whereby in the case of strong soiling it is appropriate to clean the playground equipment at intervals of three to six months.