Item No. 51 1513 401

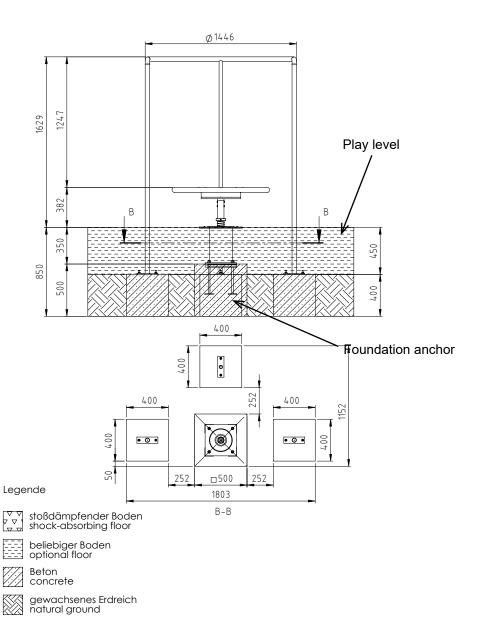




Diagram 1: Overall view of the play equipment

Item No. 51 1513 401





- 1. Select the location of the play equipment taking into account the required minimum space (see diagram 3).
- 2. Carry out excavation work for the foundations as shown in diagram 2. After excavation compress the foundation floor.

Note: The balance plate is installed at play level. Pay attention to items marked "play level" at play equipment!

3. Set up the concrete foundations according to diagram 2 with central, horizontal reinforcement. Pour the supplied foundation anchor in the middle foundation so that the upper angle frame is horizontal and flush with the foundation surface.

Reinforcement plan: Concrete foundation with reinforcement

Main foundation: BSt 500S

Stirrups Ø 8 mm lengthwise and cross

Concrete cover h'= 3 cm

Concrete quality class C20/25

- 4. After a setting period of 10 14 days, depending on weather conditions and foundation size, fill up and compress the holes between the foundation and the foundation hole with excavation.
- 5. Clean the foundation surface and place the balance equipment on the foundation anchor and screw it down.
- 6. Screw the handrail onto the foundations using the included heavy-duty dowels. Note: Pay attention to a concentric position of the handrail and the "statim".

Diagram 2: Foundation plan

Item No. 51 1513 401



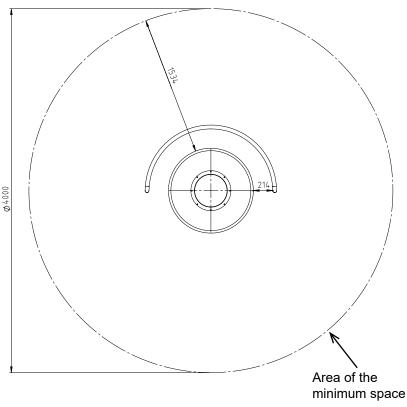


Diagram 3: Top view

7. Cover the entire impact area with fall protection according to the required drop height in accordance with EN 1176-1.

Critical drop height: 390 mm

Recommended surface material: optional, except sand.

Note: The impact surface must be free of any sharp-edged or dangerously protruding parts.

With a smaller installation depth of the handrail (special edition) we recommend synthetic impact protection. In this case, make sure that protruding parts (e.g. screws, gusset plates) are covered with appropriate fall protection.

8. Do not allow children to use the equipment before the installation has been finished.

Attention: If the play equipment has been incompletely installed or partly dismantled when carrying out maintenance and repair work, this may lead to particular risks of injury for the user. For this reason, make clearly visible that the equipment shall not be used in such cases.

NOTES:

It cannot be ruled out that external causes lead to condensation water under the glass plate. The equipment therefore has water drip caps, so that the water will drain and the equipment will dry.

Play equipment, which contain components made of stainless steel should not come with "normal" steel parts in contact. Those steel parts may rub off and leave small steel particles in combination with moisture brown rust stains.

If such corrosion occur on stainless steel parts, they are fine with an abrasive (240 grit) to remove.

Please take care when transporting and setting up the fact that the components

Item No. 51 1513 401



are made of stainless steel with no "normal" steel parts in contact.

In order to preserve a good visual appearance of your stilum playground equipment over a long period one should take care of maintenance of the stainless surface even despite of their corrosion resistance.

Especially areas, which can not be reached by rainfall should be frequently cleaned from dirt and deposits due to air pollution and dirt caused by the atmosphere.

Light soiling can easily be romoved by using a high pressure cleaner.

For persistent deposits use a clean cloth moistened with a special liquid cleaner (e.g. on phosphoric acid) and rinse off with clear water after a short application time. During cleaning with mild abrasive components, only wipe over stainless steel surface in polishing direction.

For heavily soiled surfaces, polishes can be used (e.g. for cleaning chrome on cars) or for greasy and oily dirt alcoholic cleaning agents and solvents (e.g. ethyl alcohol, isopropyl alcohol or acetone).

However, it should be noted that the dissolved soiling is not spread over the surface again.

Do not use any chlorid or hydrochloric containing cleaning products nor scouring powder, bleaching - or silver polish cleaner. Cleaning intervals depend on type and degree of soiling as well as on demands made on optical characteristics. Therefore cleaning is advisable at intervals of six to twelve months – whereby in the case of strong soiling it is appropriate to clean the playground equipment at intervals of three to six months.