

# Mounting instructions for basketball „corbis“

Item-No. 55 2012 401



*Diagram 1: Overall view of the sports equipment*

# Mounting instructions for basketball „corbis“

Item-No. 55 2012 401

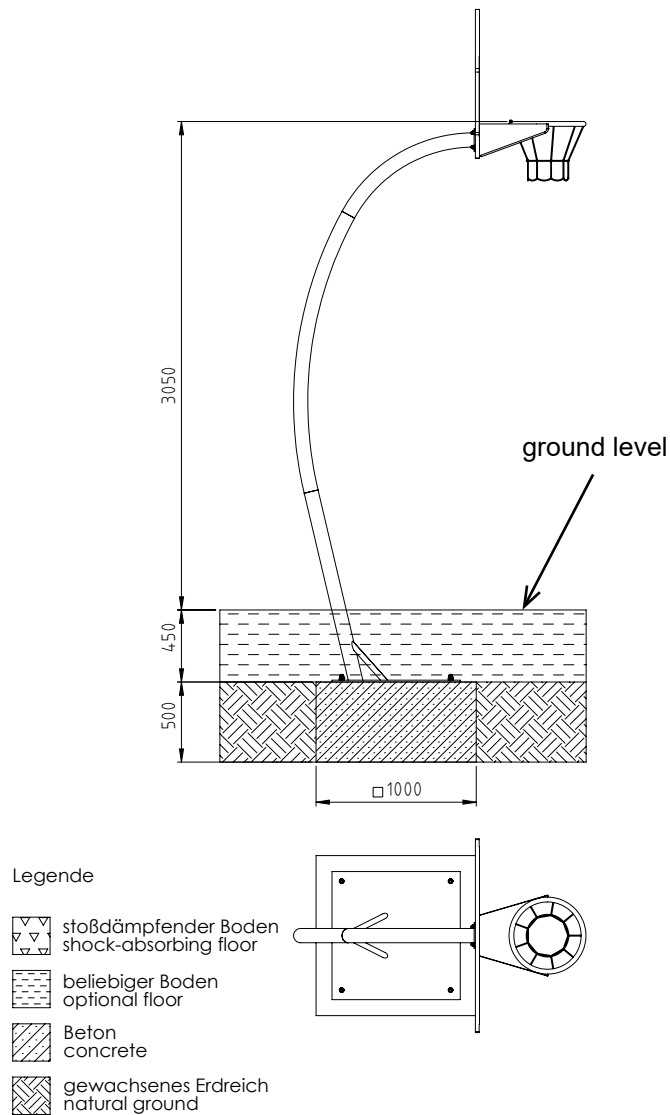


Diagram 2: Foundation plan

1. Select the location of the sports equipment taking into account sufficient free play area.
2. Carry out excavation work for the foundation as shown in diagram 2. After excavation compress the foundation floor.  
**Note:** Pay attention to items marked „ground level“ at the equipment!
3. Set up the concrete foundation acc. to diagram 2 with central, horizontal reinforcement.

## Reinforcement plan: Concrete foundation with reinforcement

Foundation: BSt 500S

Stirrups Ø 8 mm lengthwise and cross

Concrete cover  $h' = 3$  cm

Concrete quality class C25/30

4. After a setting period of 10 – 14 days, depending on weather conditions and foundation size, fill up and compress the holes between the foundation and the foundation hole with excavation. Clean the foundation surface.
5. Fasten the game board between the basketball basket and the tubular frame with the screws included in the delivery.
6. Place the sports equipment on the foundation and screw it down using the heavy-duty dowels.

# Mounting instructions for basketball „corbis“

Item-No. 55 2012 401



7. Cover the foundation with the choosed groundmaterial.  
The foundation has to be constructed that thereby is no danger (stumble, jar).  
It has to be guaranted that it would not be uncovered by erosion. The ground should be smooth and free of edges.
8. The foundation of one-mast equipment has to be accessible for regularly inspection.
9. Do not allow to use the equipment before the installation has been finished.

**Attention:** If the sports equipment has been incompletely installed or partly dismantled when carrying out maintenance and repair work, this may lead to particular risks of injury for the user. For this reason, make clearly visible that the equipment shall not be used in such cases.

**NOTE:** Sports equipment, which contain components made of stainless steel should not come with „normal“ steel parts in contact. Those steel parts may rub off and leave small steel particles in combination with moisture brown rust stains. If such corrosion occur on stainless steel parts, they are fine with an abrasive (240 grit) to remove.

Please take care when transporting and setting up the fact that the components are made of stainless steel with no „normal“ steel parts in contact.

In order to preserve a good visual appearance of your stilum sports equipment over a long period one should take care of maintenance of the stainless surface even despite of their corrosion resistance.

Especially areas, which can not be reached by rainfall should be frequently cleaned from dirt and deposits due to air pollution and dirt caused by the atmosphere. Light soiling can easily be removed by using a high pressure cleaner.

For persistent deposits use a clean cloth moistened with a special liquid cleaner (e.g. on phosphoric acid) and rinse off with clear water after a short application time. During cleaning with mild abrasive components, only wipe over stainless steel surface in polishing direction.

For heavily soiled surfaces, polishes can be used (e.g. for cleaning chrome on cars) or for greasy and oily dirt alcoholic cleaning agents and solvents (e.g. ethyl alcohol, isopropyl alcohol or acetone).

However, it should be noted that the dissolved soiling is not spread over the surface again.

Do not use any chlorid or hydrochloric containing cleaning products nor scouring powder, bleaching - or silver polish cleaner. Cleaning intervals depend on type and degree of soiling as well as on demands made on optical characteristics. Therefore cleaning is advisable at intervals of six to twelve months – whereby in the case of strong soiling it is appropriate to clean the playground equipment at intervals of three to six months.